

Thermoguard StOv (Status Overview)

2.0 (Thermoguard Version 2.96.8)

February 4, 2022

- added: **New alternative "HideGreen" Mode: Displays only sensors in a "non green" state**
- fixed: "OLD"-Detection does not work across months
- fixed: ";" in filter definition does not work, because interpreted as comment
- fixed: After calling *Thermoguard Report Live!* window (TGR), switching from chart to value tab, the digital LCD has same dimensions as chart (which is set initially to height=50% of TG-StOv window's height and width=50% of TG-StOv window's width), but should be much smaller. Now uses TGR defaults for value-tab dimensions.
- added: **Column display order and column widths are persisted now (ID dependent)**
- added: New context menu item "Reset Column Layout" (shortcut ALT+R)
- changed: The "Date Time" column width now is no longer auto sized on date change. This allows to fade it out permanently by setting its width to 0.
- added: New context menu item "Show/Hide Status Bar"
- added: Within the primary sort column, items are sorted by 1.Location, then by 2.Label, always ascending (also if primary sort order is descending).
- added: **New "Show Status Summary" window (via new context menu item or ALT+S).**
Its compact sensor status contents is refreshed analogously to the main list.
- added: Shortcut ALT+P for "Show path" context menu item
- changed: Sort order of Status "classes": "nf" (not found) is now below "OLD" (was highest before)
- changed: context menu may be invoked all over the GUI, not only over list

1.0 (Thermoguard Version 2.96.6)

December 29, 2021

- added: First release as new client component included in *Thermoguard Setup*, *Thermoguard Version 2.96.6*